



**Canadian National Security Ltd.**  
335 Henderson Hwy  
Winnipeg, MB R2L 1M7

How to set the date & time on your alarm system:

Identify what keypad you have:



5501 Keypad



5500 Keypad

Press \*6 on the keypad followed by your 4 digit system master code. If you do not know what your code is, please contact customer support at 204-654-0000 for assistance.

Next, if you have a 5501 keypad press 1. If you have a 5500 keypad, use the arrow keys <-- or --> to scroll to date and time and then press \* to select.

Using the number keys enter the time and date as follows: HH:MM MM:DD:YY

Press ### to exit programming.